

SNOW DOWN - D&B "COUPON" DIP SWITCH SETTINGS

SWITCH # 1 (SW1)									
DESCRIPTION	VALUE	SW11	SW12	SW13	SW14	SW15	SW16	SW17	SW18
SWITCH # 1 IS NOT USED IN SNOW DOWN									

SWITCH # 2 (SW2)									
DESCRIPTION	VALUE	SW21	SW22	SW23	SW24	SW25	SW26	SW27	SW28
TICKETS PER SCORE (THIS VALUE IS DIVIDED BY THE TOTAL AMOUNT OF TICKETS WON. (FOR 2 POINT TICKETS, SELECT "DIVIDE BY 2"- IF 100 TICKETS ARE WON, 50 TICKETS WILL BE DISPENSED)	1	ON	ON	ON					
	DIVIDE BY 2	OFF	ON	ON	D&B - "COUPONS" DISPLAYED				
	DIVIDE BY 5	ON	OFF	ON					
	DIVIDE BY 10	OFF	OFF	ON					
	DIVIDE BY 20	ON	ON	OFF					
	DIVIDE BY 30	OFF	ON	OFF					
	DIVIDE BY 50	ON	OFF	OFF					
	NO TICKETS GIVEN	OFF	OFF	OFF					
"TICKETS" DISPLAYED	TO HAVE THE WORD "TICKETS" DISPLAYED - TURN SW21 ON								
"COUPONS" DISPLAYED	TO HAVE THE WORD "COUPONS" DISPLAYED - TURN SW21 OFF								

SWITCH # 3 (SW3)									
DESCRIPTION	VALUE	SW31	SW32	SW33	SW34	SW35	SW36	SW37	SW38
SCORE / NOT CURRENTLY USED	ONE TIME	ON							
	TWICE	N/A							
BONUS / NOT CURRENTLY USED	ONE TIME		ON						
	TWICE		N/A						
WIN TWICE / NOT CURRENTLY USED	ONE TIME			ON					
	TWICE			N/A					
METER / NOT CURRENTLY USED	SINGLE				ON				
	DOUBLE				N/A				
SWITCH # 3 (SW3) WILL BE UPDATED FOR USE IN FUTURE SOFTWARE UPGRADES. UNTIL THAT TIME, SW31, SW32, SW33, & SW34 MUST BE SET TO ON.									

NOTICE
SW31, SW32, SW33, & SW34 SHOULD BE SET TO "ON" - ALL OTHER DIP SWITCHES THAT ARE NOT USED SHOULD BE TURNED "OFF"