

SPACE BALLZ - D&B "COUPON" DIP SWITCH SETTINGS

SWITCH # 1 (SW1)									
DESCRIPTION	VALUE	SW11	SW12	SW13	SW14	SW15	SW16	SW17	SW18
TICKETS PER SCORE (THIS VALUE IS DIVIDED BY THE TOTAL AMOUNT OF TICKETS WON. (FOR 2 POINT TICKETS, SELECT "DIVIDE BY 2"- IF 100 TICKETS ARE WON, 50 TICKETS WILL BE DISPENSED)	1	ON	ON	ON	ON	ON	ON	ON	ON
	DIVIDE BY 2	ON	OFF	ON	ON	ON	ON	ON	ON
	NOT USED								
	NOT USED								
	NOT USED								
	NOT USED								
	NOT USED								
	NOT USED								

SWITCH # 2 (SW2)									
DESCRIPTION	VALUE	SW21	SW22	SW23	SW24	SW25	SW26	SW27	SW28
DIP SW2 IS NOT USED IN SPACE BALLZ									

SWITCH # 3 (SW3)									
DESCRIPTION	VALUE	SW31	SW32	SW33	SW34	SW35	SW36	SW37	SW38
DIP SW3 IS NOT USED IN SPACE BALLZ									

NOTICE

YOU MUST CHANGE THE SSD DRIVE IN ORDER TO HAVE THE WORD "COUPONS"  
APPEAR DURING EACH WIN OR ON ATTRACT SCREEN