

# ROCKIN & ROLLIN TROUBLESHOOTING GUIDE

Rockin & Rollin will display different error codes for defective sensors or switches. These errors can only be seen while the game is in ATTRACT mode.



## ***There are 2 decimal points on "Total Tickets" SEG Display:***

The I/O board is not receiving the signal from the Blower Sensor. (Sensor NO)

1. The Blower Sensor is broken;
2. The Ball is stuck or does not blow up. (The Ball is Blocked, Low Power to the Blower, or the Blower is Broken);
3. The Signal Transmission from Blower Sensor to I/ board is loose (Check the connectors and terminals);
4. The INPUT-IC 74HC245N (U11) on the I/O board is broken - replace with spare;
5. The I/O board is defective



## ***There are 3 decimal points on "Total Tickets" SEG Display:***

The I/O Board is receiving a signal from the Blower Sensor all the time. (Sensor NC)

1. The Blower Sensor is broken;
2. A Ball (OR) other object is stuck in the blower exit.



## ***One (or more) Score LED Lights flash all the time:***

The Score Switch for the flashing Score is closed all the time. (Switch NC)

1. The Score Switch is broken;
2. A Ball (OR) other object is stuck above the Score Switch.



## ***There are 2 decimal points on "BONUS SEG" Display:***

The I/O Board is receiving a signal from the BONUS Sensor all the time. (Sensor NC)

1. The BONUS Sensor is broken;
2. A Ball (OR) other object is stuck in the BONUS HOLE.