


# Jumping A Space Ballz Computer

## VERSION # 1

Version # 1 has the power pins located on the left outer side of the board. This PC was used in games delivered prior to 2013.

Use a piece of non coated metal and touch the two pins circled in the photo. If this must be done every day - install a jump kit and connect the white power cable to these two pins.

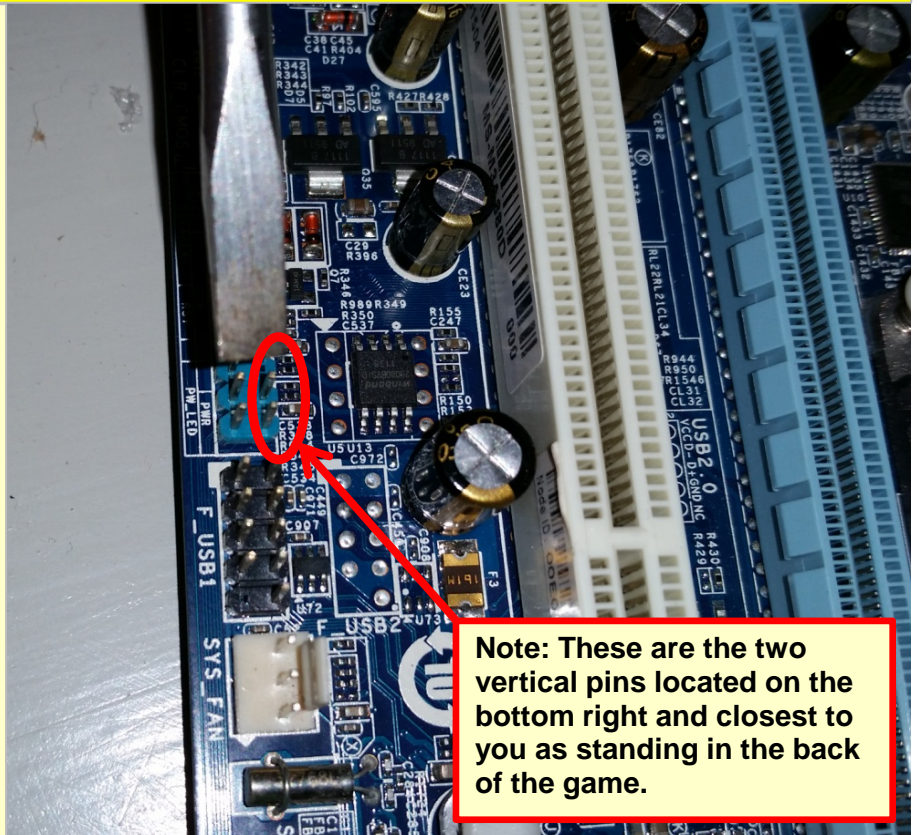


Note: These are the two vertical pins located on the bottom right and closest to you as standing in the back of the game.

## VERSION # 2

Version # 2 has the power pins located on the upper left, but they are indented from the side near the PCI slot. This PC was used in games delivered after 2013.

Use a piece of non coated metal and touch the two pins circled in the photo. If this must be done every day - install a jump kit and connect the white power cable to these two pins.

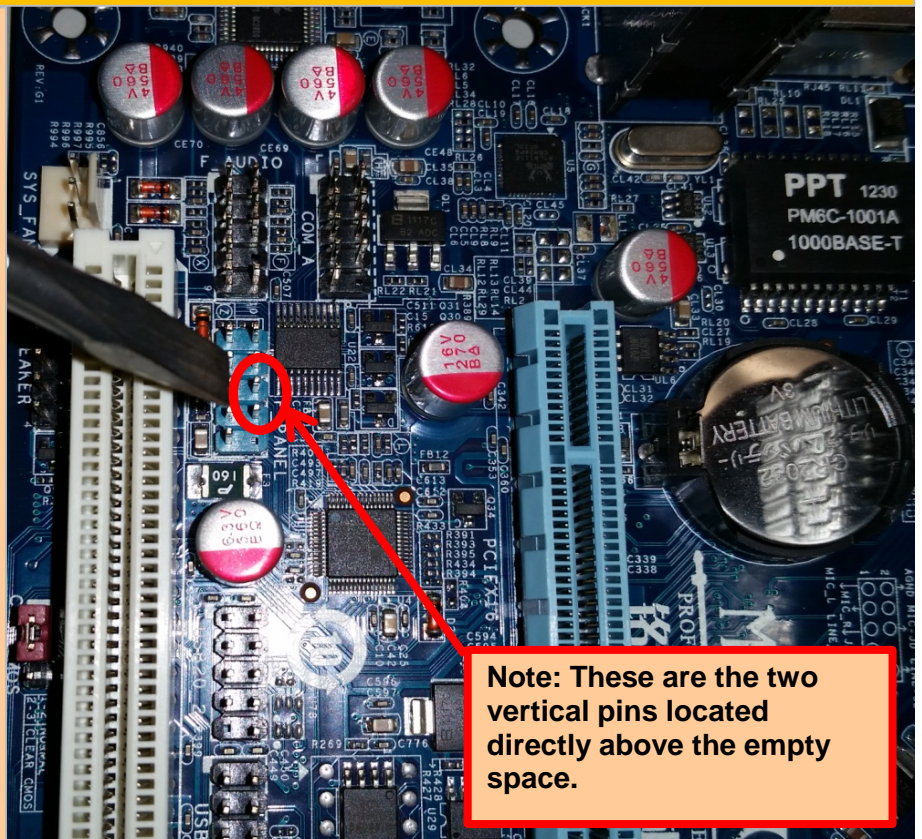

Note: These are the two vertical pins located directly above the empty space.